


How to Adjust Flag Chain Kit to Fit Flag Header. (See fig. 1)

1. Unscrew Nut 1, remove Screw 1 and adjust Cuff 1 up or down chain until the cuffs match up to the width of the header on the flag.
2. Replace Screw 1 through Cuff 1 making sure screw goes through the center of a link on the chain and through the opposite side of Cuff 1. Replace Nut 1 on opposite side of Screw 1.
3. Take out as many links as desired between Cuff 1 and the Swivel to adjust for extra chain left over after adjusting cuff.


FIG. 1: Flag Chain Kit

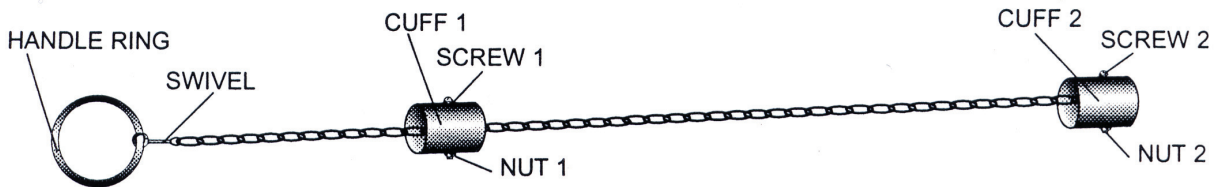

How to Attach Flag Chain Kit to Flag. (See fig. 2)

1. Wrap included hook fasteners around each cuff as you would any flag pole.
2. Drop Flag Chain Kit into header of flag.
3. Attach hook fasteners on cuffs to the loop fasteners inside flag header. Make sure chain is tight inside flag header. If not, readjust Cuff 1 until chain is not loose inside of header.
4. Your flag is now converted into a chain flag and is ready to use. Please read warnings before use.

FIG. 2: Flag Chain Kit Attached Inside Flag Header

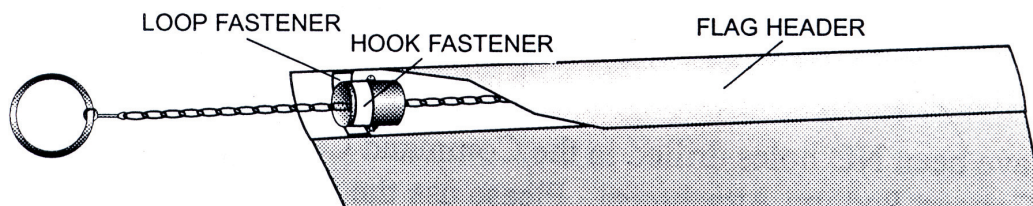

How to Remove Flag Chain Kit from a Flag.

1. Loosen cuffs from Hook & Loop fasteners.
2. Gently pull chain from the header of the flag.
3. If the Flag Chain Kit catches on the flag header or on the loop fasteners, gently loosen it before continuing to remove it from the flag. Removing flag improperly by ripping or yanking Flag Chain Kit from flag could cause damage to show flags.

*** A Nylon Practice flag is recommended for practicing with the Flag Chain Kit.**

WARNING!

- This is not a toy
- Do not swing near others. High speed impact could cause serious bodily injury
- Use only under the supervision of a qualified flag instructor
- Band Shoppe is not responsible for damages incurred from misuse of this product