
TOOLS REQUIRED

- #2 Phillips screw driver - Electric drill and 5/32" drill bit - 1/2" wrench
- 1. TIE ROD INSTALLATION

Install the two tie rods in one of the frames using the washers and plastic knobs supplied; do not tighten. Repeat for the other frame. See drawing for frame orientation. Install tie rod with the brace tab at the top. The knobs are of the locking type. It will be necessary to hold the tie rods tightly while tightening the knobs.

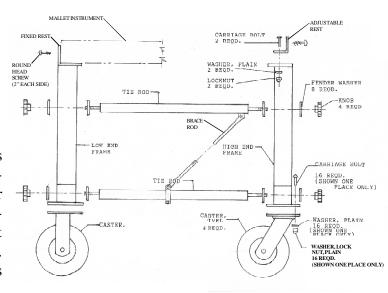

TIE ROD TUBING CLAMP HALF 1/4 x 5/8 PHILLIP HEAD SCREW (2 REQ'D) 1/4" LOCK WASHER TYPICAL CLAMP & BRACE ROD INSTALLATION

5. <u>INSTRUMENT INSTALLATION</u> Install the instrument to the frame. Install the

Install the instrument to the frame. Install the two round head screws on the low end. See drawing.

6. TONGUE

If you ordered your frame with the optional tongue, install the tongue using the two hitch pins.

2. CLAMP & BRACE INSTALLATION

Install the brace rod. See drawing.

7. VIBE PEDAL

If you ordered your frame for vibes, install the lower tie rod and vibe pedal bracket. See drawing below.

3. CASTER ATTACHMENT

Install the four (4) casters. Install the locking wheels on players side.

TIE ROD VIDE PEDAL BRACKET

4. ADJUSTABLE RESTATTACHMENT

Install the adjustable rest on the high end of your 1/4 LOCKNUT instrument. Position the rest on the center (width) of your instrument and mark for drilling. Use the two round head screws to attach the adjustable rest to your instrument.



NOTE: FOR EXTRA SECURITY - Additional screws may be installed in the sides of the rests.