

ENDURA *Drill Rifle*®

Endura Rifle Assembly Instructions

Bolt

Align the bolt in the cut-out. Insert screw through the hole in the bolt and hand-tighten until you feel it hit the body of the rifle. Using a standard Phillips head screwdriver, begin to tighten the screw while putting pressure on the driver. You should feel it begin to “bite” into the body. Continue to tighten the screw until the bolt is tight. Do not over-tighten as you may crack the bolt.

Follow the same procedure for the other screw.

Strap (optional)

Insert one screw into the hole on the o-ring/clip and align with the hole on the rifle. Using a standard Phillips screwdriver, tighten the screw until it is “hand-tight”. The O-ring/Clip should point to the center of the rifle. See figure 1 and 2.

Repeat the same procedure for the other clip.

Assemble the strap to the o-ring/clip by placing the end of the leather strap through the clip so that the short end of the strap is on the inside. Use the included fasteners to attach the ends of the strap to the main body of the strap. See figure 1.



figure 1

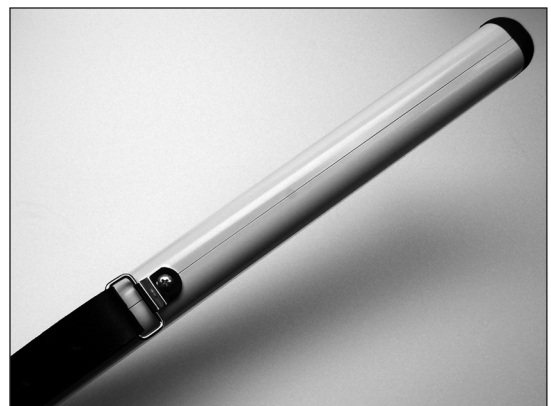


figure 2